



How to.....? Repair Bay Windows

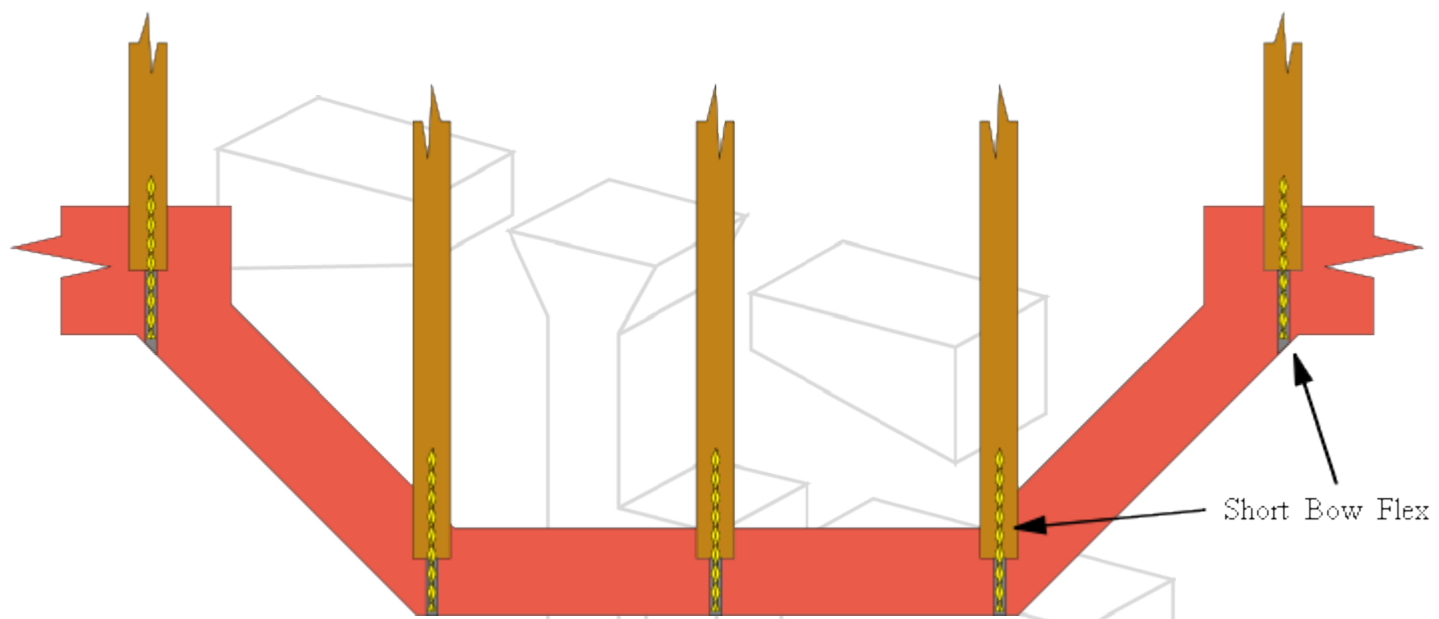

Option A

When joists run perpendicular to front elevation of bay. Use Bow Flex installed as indicated in Standard Detail BO-01 to tie the bay back to the joists.

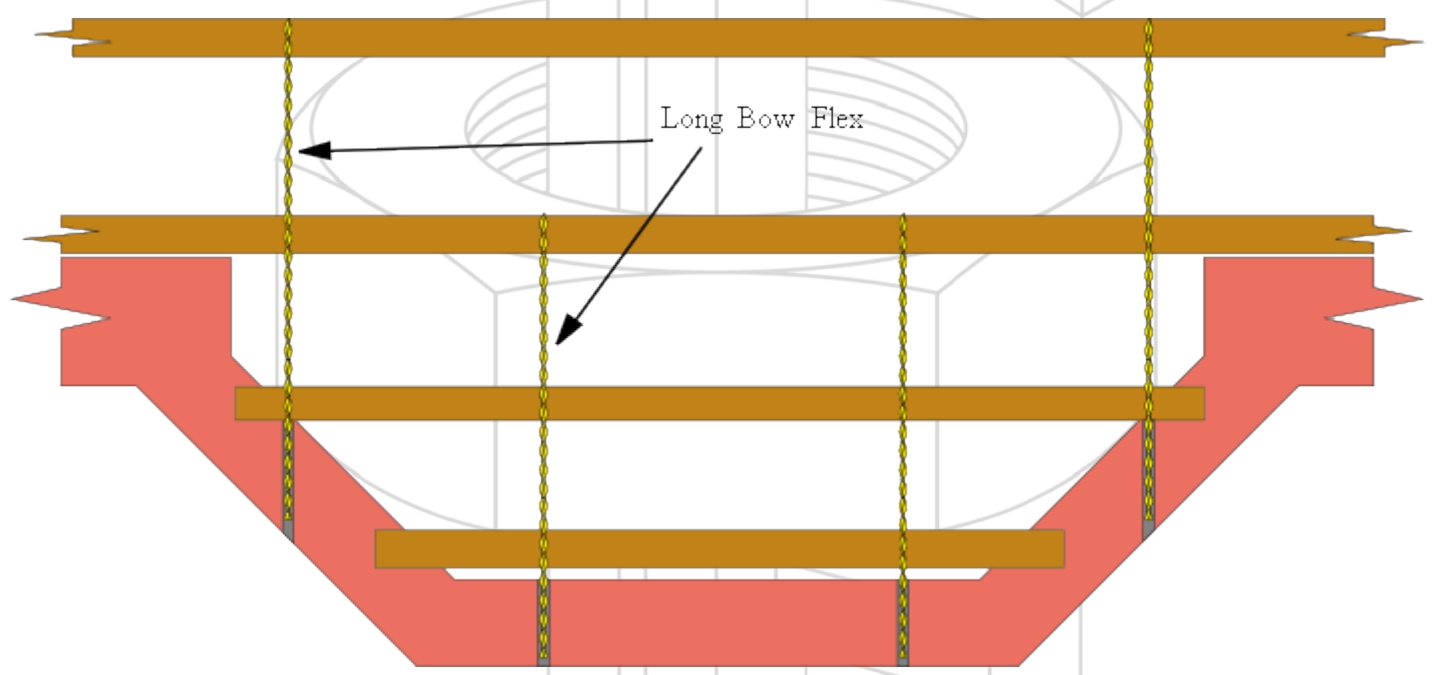

Option B

When joists run parallel to front elevation of bay. Use Bow Flex installed as indicated in Standard Detail BO-02 to tie the bay back to the joists.

Note: Depending upon the condition of the masonry and the amount of damage that has occurred it may be necessary to repair and reinforce the masonry in the bay in addition to using the tying methods shown above. This can be achieved by the use of Bar Flex (see Standard Detail BF-12) or Cem Flex (see Standard Detail CF-12).